


FREE FLOW DOOR LOUVERS

INSTALLATION INSTRUCTIONS

MODEL 200AIL /200AIL-G Advantage Intumescent Louvers

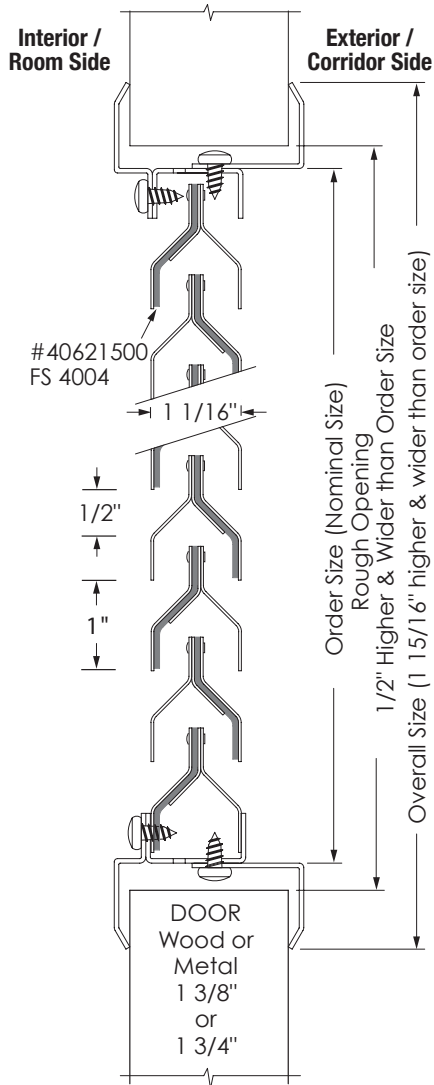

- 1 Cut the hole in the door to correspond to the rough opening size of the louvers frame (1/2" higher and wider than the order size)

Prepare the cut out if required per the door manufacturers installation instruction.
- 2 Insert frames, the corridor side and the room side. Secure with screws provided.

This product has been tested in accordance with Positive pressure Fire test of Door Assemblies UL 10C and listed with Underwriters Laboratories (U.L)